

Instructions on how to connect to the CAL-PC without being connected to the internet

Introduction

This guide explains how to connect to the CAL-REMOTE-PC while offline. This step is required whenever a new hotspot device is being used. The hotspot serves as the CAL-REMOTE-PC's source of internet connectivity.

You can also use your phone hotspot. Procedure is the same.

Tools required:

- Hot spot device (USB 4G dongle with SIM card) (later hot spot)
- 1 x utp cable (standard ethernet cable) (later ethernet cable)
- PC with Windows OS (later PC)
- Rustdesk software

Step 1: Download the Rustdesk software on your PC

Software equipment needed for this is RustDesk, found on the following link:

<https://rustdesk.com/>


Step 2: Test the Hot spot device using your mobile phone

Test the internet connection of the hot stop using your phone. Connect on the Wifi of the hot spot device and try to access the internet.

Step 3: Connecting the cable and USB dongle (4G)

Physically connect the ethernet cable to the PC and the CAL-REMOTE-PC. Make sure to use the ethernet port closer to the power supply of the CAL-REMOTE-PC (or the port labeled **ETH 2** on the newer versions of the CAL-REMOTE-PC).

Hot spot device connects to one of the USB ports.

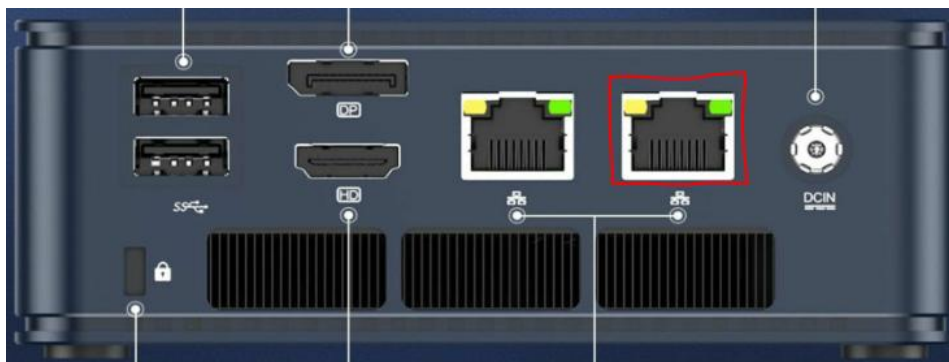


Step 4: Set the static IP on the PC

On the PC open the "Ethernet settings" and the port that is connected to the CAL-REMOTE-PC has to have IP set to static.

Pres Win+R button on the keyboard. Enter the "**ncpa.cpl**" and press enter. Window with network adapters should open. Right click on the Ethernet adapter (not Wifi) and click **Properties**.

Click on the **Internet protocol IPv4 (TCP/IPv4)** and click **Properties** once again. Change the IP address to **192.168.0.106** and subnet to **255.255.255.0**

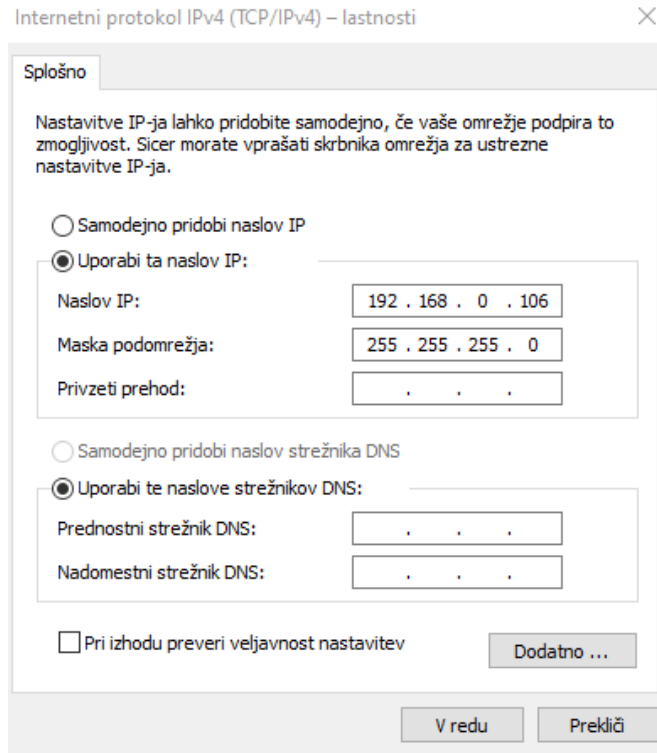

Internetni protokol IPv4 (TCP/IPv4) – lastnosti

Splošno

Nastavitve IP-ja lahko pridobite samodejno, če vaše omrežje podpira to zmogljivost. Sicer morate vprašati skrbnika omrežja za ustrezne nastavitve IP-ja.

☐ Samodejno pridobi naslov IP

☒ Uporabi ta naslov IP:

Naslov IP: 192 . 168 . 0 . 106

Maska podomrežja: 255 . 255 . 255 . 0

Privzeti prehod: . . .

☐ Samodejno pridobi naslov strežnika DNS

☒ Uporabi te naslove strežnikov DNS:

Prednostni strežnik DNS: . . .

Nadomestni strežnik DNS: . . .

☐ Pri izhodu preveri veljavnost nastavitvev

Dodatno ...

V redu Prekliči

Click OK and Close. Static IP is set.

Step 5: Connect to the CAL-REMOTE-PC using Rustdesk

Open the RustDesk program on your PC and in the field **Control Remote Desktop** type in **192.168.0.105**. This is the IP set for the CAL-REMOTE-PC.

Click **Connect**.

A window should open asking for password. Type in **Calms123** and enter.

Now you should be successfully connected to the CAL-PC.

Step 6: Configure the Wifi on CAL-REMOTE-PC for your hot spot

Click on the Wifi icon and find your wifi network. Click on it and enter password.

Test the internet connection using edge browser installed on the CAL-REMOTE-PC.